UNCONDITIONAL GUARANTEE

Your Argus Electromatic Viewer is **unconditionally** guaranteed by the manufacturer to operate properly for a period of one year from the date of original purchase. If, during this period, your viewer fails to operate for **any** reason, Argus, Incorporated, will restore it to operating condition at no charge to you. (This includes all parts and labor.)

This unconditional guarantee applies to the product itself. We regret that we are unable to assume liability for loss of film or for other expense or inconvenience.

This unconditional guarantee is valid only for the original retail purchaser and only if the product is returned prepaid, directly or through an Argus dealer, to the Customer Service Department, Argus, Incorporated, 2080 Lunt Avenue, Elk Grove Village, Illinois 60007, or one of their authorized service locations. The date and place of original purchase must be included, along with a description of the difficulties encountered.

Many apparent product difficulties are actually a matter of incorrect usage. It is always wise to see your Argus dealer before returning the product for servicing.

CUSTOMER SERVICE DEPARTMENT, ARGUS, INCORPORATED

MAIN OFFICE 2080 Lunt Avenue, Elk Grove Village, Illinois 60007
IN CANADA Davis Drive East, Newmarket, Ontario

For the address of the service location nearest you which is authorized to repair Argus products under guarantee, contact your Argus dealer or write to the main office of the Customer Service Department.

PART NO. 56400-656 LITHO IN U.S.A.

SERVICE

For information about your viewer, or for service or replacement parts, see your Argus dealer, authorized service location, or write to the main office of the Argus Customer Service Department (address listed at left).

When writing, be sure to mention you have the Argus 693 Electromatic Viewer.

Argus Incorporated
5950 Touhy Avenue
Chicago, Illinois 60648

ARGUS CAMERAS OF CANADA, LTD.
Newmarket, Ontario

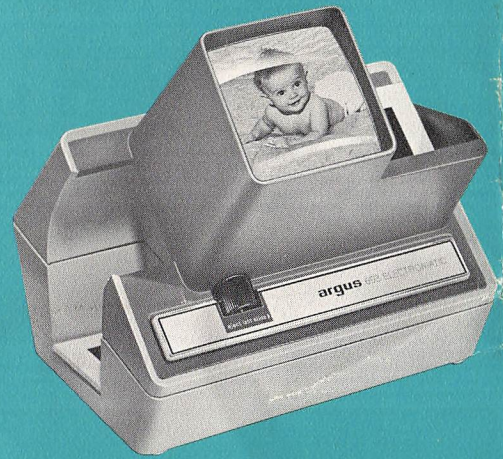

argus

693

ELECTROMATIC SLIDE VIEWER

OPERATION

Plug the power cord into any 110-120 volt 60-cycle AC outlet. **Do not use any other type of current.** Have the switch in the full counterclockwise position (OFF).

Place your stack of slides (up to 36) in the SUPPLY BIN. Your viewer will accept cardboard or plastic-mounted slides (max. thickness .075" or 5/64").

Turn the switch clockwise to the first "notch" to turn the light on. Turning it further to the second notch turns the motor on to change the slides automatically every five seconds. To hold a slide for longer viewing, turn the switch back one notch which leaves the light on but turns the motor off.

The slides are automatically restacked in the left-hand RETURN BIN after they are shown. To eject the last slide, turn EJECT KNOB to the right.

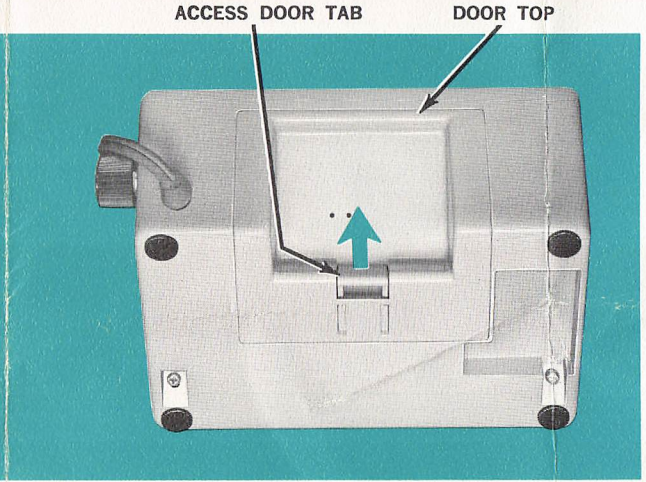

LIGHT BULB REPLACEMENT

To replace the bulb, turn the viewer over to rest on its front. Pull the ACCESS DOOR TAB **up** and remove the door (bottom lifts out first). The bulb unscrews from its socket. For a replacement, ask your dealer or electrical shop for a 7C7 bulb (7-watt) or equivalent.

When replacing the door, slip the top in place first. Note the lip on the top of the door which locks the top in place. When the door is seated, press the ACCESS DOOR TAB down to lock.

CARING FOR YOUR VIEWER Your Electromatic Slide Viewer should be kept in a dust-free place when not in use. The exterior surfaces can be wiped with a damp cloth. To clean the lens, use a soft lintless cloth or a lens tissue. Do not use any type of abrasive cleanser.